



MODERN OUTLINE KITS

BUILD INSTRUCTIONS GWR Armstrong 4-4-0

Loco Chassis Correction P10

17th Oct 2011

Brake gear


Notes

The Brake Hangers may be pinned or screwed (Not supplied) to the Hanger brackets. Brackets are soldered to the chassis

The Shoes are pinned to the Hangers with 0.8mm wire and the Stretchers are made from 1.00mm wire.

The small details B009 for the rodding are found on the brass sheet.

Construction is straight forward with brake rodding assemble both inside and outside of the driving wheels to the actuator at the rear of the chassis.

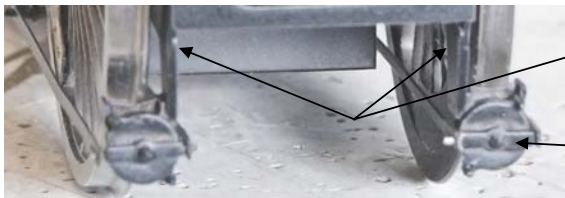

Brake cylinder brackets are soldered to the inside of the chassis frame. Observe the rebate on the bracket to help position vertically.

Bar at the rear to be horizontal

